

ROMANBLIND - Fitting Instructions

Attaching the Universal Fixing Brackets

If you intend to affix the blind to a soft headlining we can supply spacers. This avoids the finger tabs damaging the surface of the headlining. By attaching the plastic spacers between the bracket and the fixing surface.

When selecting a fixing point, ensure that the brackets will not be located over any of the ladder tilt mechanisms inside the headrail. Using self tapping pan head No.6 wood screws (stainless steel recommended), fix the universal brackets to the top or face of the hatch/window frame surface. They should be spaced equidistant from the ends of the blind. We recommend that you position one of the brackets close to the lift cord outlet.

After fixing, open the brackets by sliding the finger tabs to towards the centre of the bracket. Offer the headrail up to the brackets ensuring that the head-rail clips into place when gently pushed. Once the headrail has clipped into place, slide finger tabs left securing the headrail to the brackets.

If extension brackets have been supplied, fix the universal brackets to the underside of the extension bracket using the fixings provided.

WARRANTY

- **Oceanair** does not guarantee, *Customer Supplied Fabrics*, against creasing, UV stability or fading.
- **Lining fabric** chosen according to specification. Blackout fabric is only guaranteed if specifically requested. All Oceanair supplied backing material is UV stable and is ColourFast, where stated.
- **Headrails** are not salt water proof and we recommend that blinds are not fitted where they may be exposed to salt water.

Care & Maintenance

- All roman blind fabrics can be cleaned, and we recommend that they are Dry Cleaned only.
- The fabric is secured to the headrail with Velcro and is easy to remove.



Guidewire Installation *NEW style spring tensioned Guidewire*

Affix the mounting brackets directly above the Guidewire holes or as close as possible. This creates the high wire tension needed for the smooth operation of the blind.



Mount the blind and fix the position of the Guidewire hold down - must be at right angles and directly below Guidewire hole in headrail. Fix one hold down then equally space second hold down using the headrail as a spacer.

Mount base fitting and measure height between bottom of headrail and worktop surface. Pass wire through cap knotting off one end first and the measured distance. Ensure spring between Guidewire is centrally positioned between any hardware in the headrail.

On the second Guidewire take previous measurement and shorten by 15mm, pass through cap and knot. This should give sufficient tension to open the spring and ensure both Guidewires are adequately tensioned. If insufficient and loose, shorten wire as required. Screw down both caps so that they are flush with the surface.

Side Track Installation

Fit the side rails taking care to mount them exactly opposite each other. Place headrail on top of, and on the same centreline of the tracks, ensuring headrail is close enough so that the horizontal rods do not escape during operation. Place the fixing brackets close to the top of the headrail and mark positions for the screws. It is preferred to insert one lip of the rail into the bracket; if the rail is clicked fully into the bracket at this stage, it is difficult to remove. The fixing brackets should be centred 50mm from each end of the head rail. Feed the rod ends into side rails and clip the head rail into place.

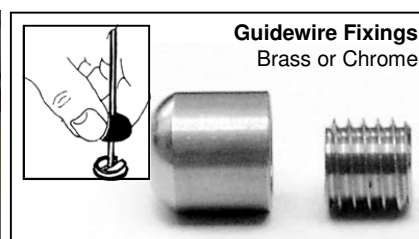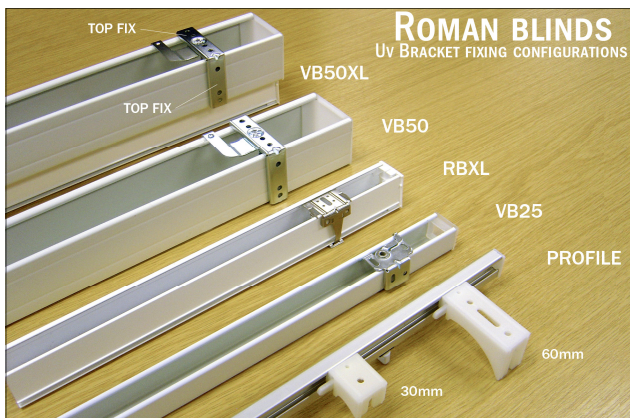

Oceanair Marine Ltd Atlantic House 1 Ellis Square Chichester PO20 0AY England
 T: +44 (0)1243 606909 F: +44 (0)1243 608300 www.oceanair.co.uk E: techsupport@oceanair.co.uk